



Installation Instruction

Manual Inner Lighting MX-5 NA/NB
NAB-1600 / 1601 / 1602

I.L. MOTORSPORT


For the installation you will need

- 1 phillips screwdriver
- 1 slotted screwdriver
- 1 combination pliers
- 1 small mechanic

Installation :


MX-5 Type NA

1. To remove the glove compartment, close the compartment and loosen the two phillip screws on the bottom. When these are removed (Bild 1), open the glove compartment and remove completely.

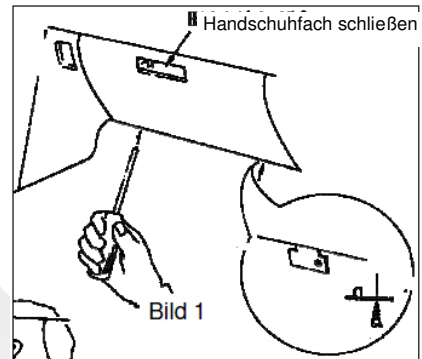


MX-5 Type NB

1a. open the glove compartment (Bild 1a) and pull on the right side of the compartment until it pops out, now you can take the glove compartment out.

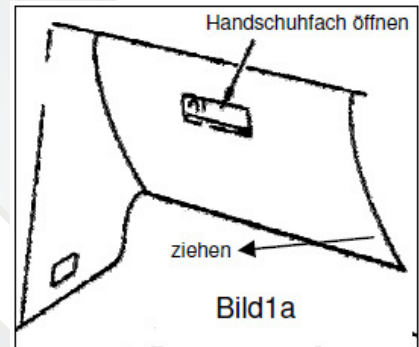

2. There are several ways to get the cables through the console on the driverside. With one look through the open glove compartment you will find them. (Bild 2)

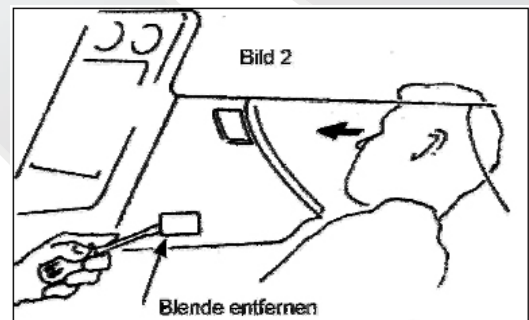


3. The genuine covers on the center dashboard are easily removed with a slotted screwdriver. (Bild 2)

4. Please lay the supplied cables next to each other and pay attention to the colors and the connectors male / female.

You will start on the driverside when you have got both female connectors on the passengerside.

This is the hard part of the installation and will require some patience. (Bild 3)

The two double wired female connectors, will remain on the opening for the new lighting on the driverside.

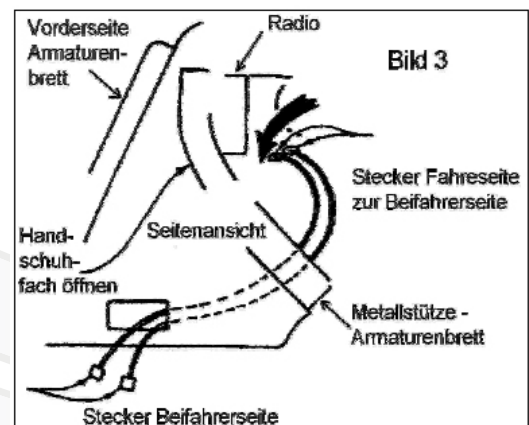




Installation Instruction


Manual Inner Lighting MX-5 NA/NB
NAB-1600 / 1601 / 1602

I.L. MOTORSPORT

5. The connecting cable with connectors can hang on the driverside in the footwell.
Both cables can now be connected to the lamps,
(Bild 4)

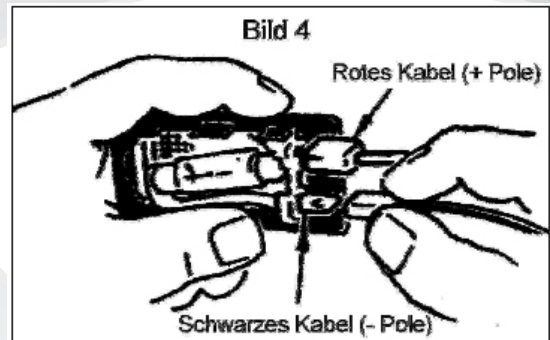


6. The now fully connected lamps can be installed in the wholes on both sides of the dashboard.
(Bild 5)

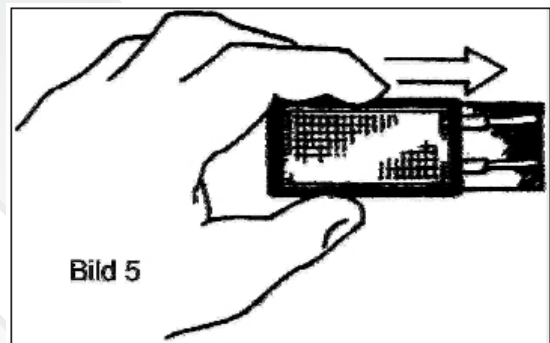

7. After the lamps have been installed we can now connect the electric connections.
For the next couple of steps you will have to position yourself in a way so that you can see under the cockpit of the driverside.
A small light would make the job a little easier.

MX-5 Typ NA 1989 – 1994 (Bild 6b)

Now you will have to locate the with foam covered connector under the cockpit. From this connector there are coming two cables, a red with white stripe and a blue with red stripe. Connect a current thief on both cables (Bild 7). Now connect the black cable to the red with white stripe and the red cable with the blue and red stripe.

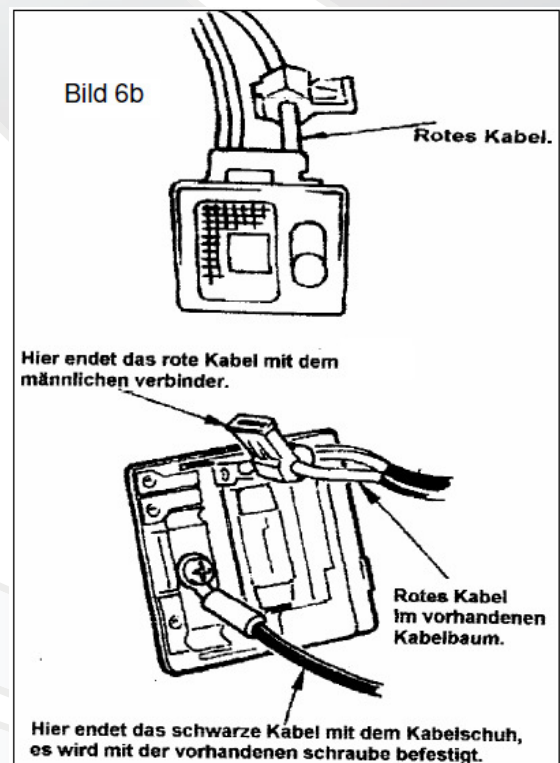



Installation Instruction

Manual Inner Lighting MX-5 NA/NB
NAB-1600 / 1601 / 1602


I.L. MOTORSPORT

MX-5 Typ NA 1994 – 1998 (Bild 6a)

Now locate the red main cable (foam covered) under the dashboard and connect the current thief to this cable.

(Bild 7)

Now connect the black cable from the lamp with the „eye“ to the original screw of the on/off connector.

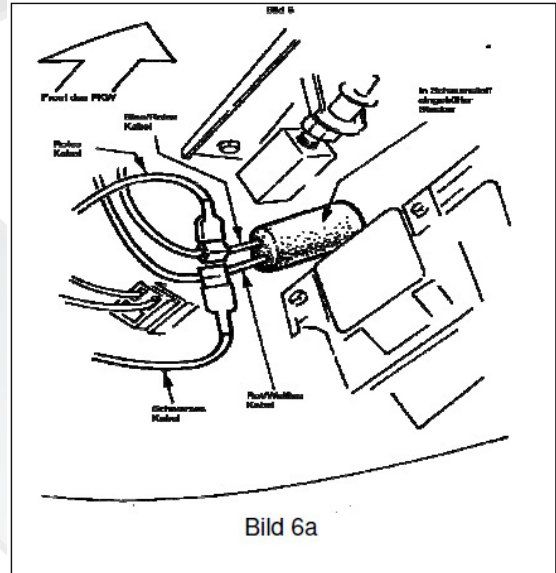



MX-5 Typ NB ab 1999 (Bild 6)

Search for the connector of the original interior lighting. This can be found in the footwell on the left sidewall and is about 4cm long and 1,5cm wide.

From this connector there are coming two cables, a red with white stripe and a blue with red stripe. Take the connector from the bracket.

Install a current thief on both cables (Bild 7)

Now connect the red cable to the red and white stripe cable and connect the black cable to the blue with red stripe cable. dem blauen

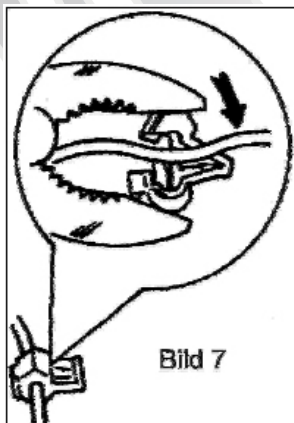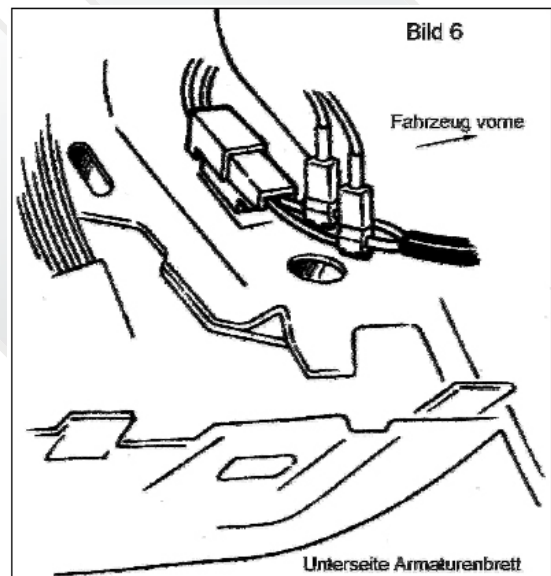

Die Stromdiebe fest mit der Kombizange zusammendrücken